



1650CT / 1650 / 1650CTSN / 1650SN / 1650DR "COBRAPRESS" PRESS FITTINGS FOR "AL-COBRAPEX" MULTILAYER PIPE









DESCRIPTION

Tiemme press fittings for multilayer pipes adapt to any type of heating/cooling and sanitation system, with application in residential, commercial, industrial and agricultural sectors and, in general, with any kind of non-corrosive fluid.

These fittings are used to make irreversible joints and so can be used for chased installation in compliance with current standards.

These press fittings are characterised by their sealing mechanism which is created by mechanical deformation of the external stainless-steel bush.

This deformation is carried out using a specific tool equipped with suitable steel crimpers; this ensures that the clamping pressure is always the same and is at an optimal level for all the fittings, thus increasing the reliability of the joint.

Tiemme press fittings are also characterised by the presence of a polymer ring which performs three very important functions:

- The first, since it is a plastic material, is its dielectric function, i.e. it prevents the internal aluminium layer of the pipe from coming into contact with the body of the fitting (in brass) and triggering the **galvanic corrosion** process, caused by stray currents (to learn more see the "INFORMATION FROM TIEMME" section of this technical data sheet).

- The second function, also of fundamental importance, is that which allows the installer to visually and easily check that the pipe is correctly inserted into the fitting.

- The third function facilitates the correct positioning of the fitting to be pressed inside the "TH" profile crimping tool.

This quickly and easily verifiable possibility, guarantees a peace of mind during installation that is rare in other types of fittings.

ADVANTAGES / STRENGTHS

- Double gasket and anti-slip profile: to guarantee perfect sealing.
- Stainless-steel pipe clamping bush: high resistance to corrosion.
 Plastic ring nut with 4 viewing windows: makes it possible to check the correct insertion of the pipe.
- Multi-crimping fittings (TH, U, H, B, RF, Tiemme customised TH profile).
- Can be chase installed.
- System complete with dedicated AL-COBRAPEX pipe and tools (shears, calibrating/deburring tools, pressers, crimpers...).
- Wide range available, for every installation need:
 - Connection diameters from 14 to 90 mm.
 - Compact series / Standard series.
 - Series with tin-plated finish to offer a corrosion-resistant, attractive look in chased systems.
 - Series made in CW602N dezincification-proof brass: this alloy's property prevents the break-up of the zinc contained in it, for greater structural reliability of the fitting over time, while preventing the leaching of external metals into the water being conveyed. RINA certified series, also suitable for applications in the naval sector.



PRODUCTION RANGE

Press fittings for multilayer pipe are available in a wide range of sizes (from \emptyset 14 to \emptyset 90 mm), different shapes (straight, curved, T-shaped etc.), with different types of connections (female threaded connections, Male threaded connections, intermediate press connections etc...), and in different versions (compact version, standard version, version with tin-plated finish and a version made in CW602N dezincification-proof brass), to meet all kinds of system requirement.

See the MASTER catalogue for the full range.

CONSTRUCTION SPECIFICATIONS

1650CT series (compact version)

(1) Fitting body:	CW617N Brass
(2) Ring nut / dielectric and viewing ring:	PA
(3) O-ring seal:	EPDM
(4) Clamping bush:	AISI 304 stainless steel
Threads:	F ISO 228
	M ISO 228 / M ISO 7/1 (EN 10226) R conical

1650 series (standard version)

(1) Fitting body:	CW617N Brass
(2) Ring nut / dielectric and viewing ring:	PA
(3) O-ring seal:	EPDM
(4) Clamping bush:	AISI 304 stainless steel
Threads:	F ISO 7/1 (EN 10226) RP cylindrical
	M ISO 7/1 (EN 10226) R conical

1650CTSN series (compact version / tin-plated finish)

(1) Fitting body:	Tin-plated CW617N Brass
(2) Ring nut / dielectric and viewing ring:	PA
(3) O-ring seal:	EPDM
(4) Clamping bush:	AISI 304 stainless steel
Threads:	F ISO 228
	M ISO 228 / M ISO 7/1 (EN 10226) R conical

1650SN series (standard version / tin-plated finish)

(1) Fitting body:	Tin-plated CW617N Brass
(2) Ring nut / dielectric and viewing ring:	PA
(3) O-ring seal:	EPDM
(4) Clamping bush:	AISI 304 stainless steel
Threads:	F ISO 7/1 (EN 10226) RP cylindrical
	M ISO 7/1 (EN 10226) R conical


1650DR series (version made of CW602N anti-dezincification brass)

(1) Fitting body:	CW602N anti-dezincification brass
(2) Ring nut / dielectric and viewing ring:	PA
(3) O-ring seal:	EPDM
(4) Clamping bush:	AISI 304 stainless steel
Threads:	F ISO 7/1 (EN 10226) RP cylindrical
	M ISO 7/1 (EN 10226) R conical

TECHNICAL SPECIFICATIONS

	Maximum working temperature:	+ 95 °C
	Minimum working temperature:	 - 20 °C (provided the fluid remains in the liquid phase)
	Maximum working pressure:	10 bar (relative to the AL-COBRAPEX multilayer pipe)
•	Fluid compatibility:	Drinking water, water and glycol solutions (maximum percentage of glycol 30%) non-corrosive fluids *

* To check compatibility with fluids or other substances not listed, contact the Tiemme Technical Dept.

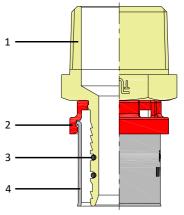





ΕN

INSTRUCTIONS FOR CORRECT ASSEMBLY

To obtain a perfect join between fitting/pipe, some simple but important operations must be carried out:

made in the brass fitting, if not, the ring nut/bushing should be repositioned. It is also advise the pipe is placed correctly in contact with the plastic ring nut to ensure that the induminium layer does not encounter the covering material. Position the fitting correctly onto the crimper of the specific tool (pressing tool). Ensure that the jaws are not particularly worn. Press the fitting. Make sure that the crimper fully closes. Tiemme fittings are designed and tested to be pressed indifferently with 6 different press the fitting. See the "MULTI-CRIMP FITTINGS" section of this technical data sheet. Bending: The pipe can be bent by hand or using the specific tools, depending on the radius required. The table below provides an indication of the minimum bending radii permitted: Ø external pipe Bending radius R (mm) Manual Manual									
Recommended tools: Up to Ø 32 mm Art. 1495 - over Ø 32 mm Art. 1683 Pipe calibration and flaring: Restore the shape of the pipe using the appropriate calibrator. Take care when carrying out pipe calibration and deburring; the proper tools must be used. Any burr residue could damage the O-rings. The calibrating/deburring tool should be inserted into the pipe and then turned clockwise. Recommended tools: Complete case Art. 1498SET Connecting the pipe to the fitting: Insert the pipe into the fitting until it encounters the stop (check through the 4 "windows" ring); take care not to move the O-ring seals out of their seat. Connection will be easier if the pipe is lubricated with silicone oil or water. For domestic distribution applications, make sure that the silicone oil used is suitable for food application. The use of a different lubricant could damage the fitting's seals. Make sure that the oil used is compatible with the construction materials of the fitting. Met the torss fitting, fnot, the ring nut/bushing is correctly assembled in the specimate in the brass fitting, fnot, the ring nut/bushing should be repositioned. It is also advist check that the pipe is placed correctly in contact with the plastic ring nut to ensure that the i aluminium layer does not encounter the covering material. Posting Before pressing the fitting, check that the ringe rut/bushing should be repositioned. It is also advist check that the pipe is placed correctly in contact with the plastic ring nut to ensure that the i aluminium layer does not encounter t									
Pipe calibration and flaring: Restore the shape of the pipe using the appropriate calibrator. Take care when carrying out pipe calibration and deburring; the proper tools must be used. Any burr residue could damage the O-rings. The calibrating/deburring tool should be inserted into the pipe and then turned clockwise. Recommended tools: Complete case Art. 1498SET Connecting the pipe to the fitting: Insert the pipe into the fitting until it encounters the stop (check through the 4 "windows" ring); take care not to move the O-ring seals out of their seat. Connection will be easier if the pipe is lubricated with silicone oil used is suitable for food application. The use of a different lubricant could damage the fitting's seals. Make sure that the oil used is compatible with the construction materials of the fitting. Before pressing the fitting, check that the ring nut/bushing is correctly assembled in the specimade in the pise is placed correctly in contact with the plastic ring nut to ensure that the i aluminium layer does not encounter the covering material. Postion the fitting care designed and tested to be pressed indifferently with 6 different preme customised TH - TH - U + H - B. RF Por further details, see the "MULTI-CRIMP FITTINGS" section of this technical data sheet. Bending radius R (mm) We care a to be bent by hand or using the specific tools, depending on the radius required. The table below provides an indication of the minimu bending r	The use of hacksaws of angle grinders must be avoided as they could deform the pipe.								
Pipe calibration and flaring: Restore the shape of the pipe using the appropriate calibrator. Take care when carrying out pipe calibration and deburring; the proper tools must be used. Any burr residue could damage the 0-rings. The calibrating/deburring tool should be inserted into the pipe and then turned clockwise. Recommended tools: Complete case Art. 1498SET Connecting the pipe to the fitting: Insert the pipe into the fitting until it encounters the stop (check through the 4 "windows" ring); take care not to move the 0-ring seals out of their seat. Connection will be easier if the pipe is lubricated with silicone oil used is suitable for food application. The use of a different lubricant could damage the fitting's seals. Make sure that the oil used is compatible with the construction materials of the fitting. Before pressing the fitting, check that the ring nut/bushing is correctly assembled in the speci made in the pise is placed correctly in contact with the plastic ring nut to ensure that the i aluminium layer does not encounter the covering material. Postion the fitting curvetly worn. Press the fitting. Make sure that the crimper fully closes. Therme curvetly asset the time disage and tested to be pressed indifferently with 6 different premerus considered the specific tools, depending on the radius required. The use of a bent by hand or using the specific tools, depending on the radius required. The pripe can be bent by hand or using the s	Recommended tools: Up to Ø 32 mm Art. 1495 - over Ø 32 mm Art. 1683								
Restore the shape of the pipe using the appropriate calibrator. Take care when carrying out pipe calibration and deburring; the proper tools must be used. Any burr residue could damage the O-rings. The calibrating/deburring tool should be inserted into the pipe and then turned clockwise. Recommended tools: Complete case Art. 1498SET Connecting the pipe to the fitting: Insert the pipe into the fitting until it encounters the stop (check through the 4 "windows" ring); take care not to move the O-ring seals out of their seat. Connection will be easier if the pipe is lubricated with silicone oil or water. For domestid distribution applications, make sure that the silicone oil used is suitable for food application. The use of a different lubricant could damage the fitting's seals. Make sure that the oil used is compatible with the construction materials of the fitting. Pressing: Before pressing the fitting, if not, the ring nut/bushing should be repositioned. It is also advis check that the pipe is placed correctly in contact with the plastic ring nut to ensure that the i aluminium layer does not encounter the covering material. Position the fitting. Make sure that the ring nut/bushing should be repositioned. It is also advis check that the pipe is placed correctly onto the crimper of the specific tool (pressing tool). Ensure that the jaws are not particularly worn. Press the fitting. Make sure that the crimper fully closes. Tiemem fittings are designed and tested to be pressed indifferently with 6 different p Tiemme customised TH - TH - U - H - B - RF For further details, see the "MUL									
Restore the shape of the pipe using the appropriate calibrator. Take care when carrying out pipe calibration and deburring; the proper tools must be used. Any burr residue could damage the O-rings. The calibrating/deburring tool should be inserted into the pipe and then turned clockwise. Recommended tools: Complete case Art. 1498SET Connecting the pipe to the fitting: Insert the pipe into the fitting until it encounters the stop (check through the 4 "windows" ring); take care not to move the O-ring seals out of their seat. Connection will be easier if the pipe is bubricated with silicone oil or water. For domestid distribution applications, make sure that the silicone oil used is suitable for food application. The use of a different lubricant could damage the fitting's seals. Make sure that the oil used is compatible with the construction materials of the fitting. Perssing: Before pressing the fitting, check that the ring nut/bushing is correctly assembled in the specific decorrectly in contact with the plate ir ring nut to ensure that the i aluminium layer does not encounter the covering material. Position the fitting correctly onto the crimper of the specific tool (pressing tool). Ensure that the jaws are not particularly worn. Press the fitting. Make sure that the crimper fully closes. Timeme fittings are designed and tested to be pressed indifferently with 6 different p Timeme customised TH - TH - U - H - B - RF For further details, see the "M									
Take care when carrying out pipe calibration and deburring; the proper tools must be used. Any burr residue could damage the O-rings. The calibrating/deburring tool should be inserted into the pipe and then turned clockwise. Recommended tools: Complete case Art. 1498SET Connecting the pipe to the fitting Insert the pipe into the fitting until it encounters the stop (check through the 4 "windows" ring); take care not to move the O-ring seals out of their seat. Connection will be easier if the pipe is lubricated with silicone oil or water. For domestic distribution applications, make sure that the silicone oil used is suitable for food application. The use of a different lubricant could damage the fitting's seals. Make sure that the oil used is compatible with the construction materials of the fitting. Pressing: Before pressing the fitting, if not, the ring nut/bushing is correctly assembled in the specific dool (pressing tool). Insure that the pipe is placed correctly on the crimper of the specific tool (pressing tool). Insure that the jaws are not particularly worn. Press the fitting. Make sure that the crimper of the specific tool (pressing tool). Insure that the jaws are not particularly worn. Press the fitting. Make sure that the crimper of the specific tool (pressing tool). Insure that the jaws are not particularly worn. Press the fitting. Make sure that the crimper fully closes. Tiemme distomsed TH - TH - U -	Pipe calibration and flaring:								
Any burr residue could damage the O-rings. The calibrating/deburring tool should be inserted into the pipe and then turned clockwise. Recommended tools: Complete case Art. 1498SET Connecting the pipe to the fitting: Insert the pipe into the fitting until it encounters the stop (check through the 4 "windows" ring); take care not to move the O-ring seals out of their seat. Connection will be easier if the pipe is lubricated with silicone oil or water. For domestid distribution applications, make sure that the silicone oil used is suitable for food application. The use of a different lubricant could damage the fitting's seals. Make sure that the oil used is compatible with the construction materials of the fitting. Pressing: Before pressing the fitting, check that the ring nut/bushing is correctly assembled in the specific dool (pressing tool). Ensure that the pipe is placed correctly in contact with the plastic ring nut to ensure that the i aluminium layer does not encounter the covering material. Position the fitting, ware that the crimper of the specific tool (pressing tool). Ensure that the jays are not particularly worn. Press the fitting, ware that the crimper fully closes. The mene customised TH - TH - U - H - B - RF For further details, see the "MULTI-CRIMP FITTINGS" section of this technical data sheet. Bending: The pipe can be bent by hand or using the specific tools, depending on the radius required. The t									
Image: A constraint of the specific tool (pressing tool) Image: A constraint of the specific tool (pressing tool) Image: A constraint of the specific tool (pressing tool) Image: A constraint of the specific tool (pressing tool) Image: A constraint of the specific tool (pressing tool) Image: A constraint of the specific tool (pressing tool) Image: A constraint of the specific tool (pressing tool) Image: A constraint of the specific tool (pressing tool) Image: A constraint of the specific tool to the specific tool (pressing tool) Image: A constraint of the specific tool (pressing tool) Image: A constraint of the specific tool (pressing tool) Image: A constraint of the specific tool (pressing tool) Image: A constraint of the specific tool (pressing tool) Image: A constraint of the specific tool (pressing tool) Image: A constraint of the specific tool (pressing tool) Image: A constraint of the specific tool (pressing tool) Image: A constraint of the specific tool (pressing tool) Image: A constraint of the specific tool (pressing tool) Image: A constraint of the specific tool (pressing tool) Image: A constraint of the specific tool (pressing tool) Image: A constraint of the specific tool (pressing tool) Image: A constraint of the specific tool (pressing tool)									
Image: Accommended tools: Complete case Art. 1498SET Image: Accomme									
Image: Accommended tools: Complete case Art. 1498SET Image: Accomme	The collingtion (alphymics to all the side and distantly interaction and there to see all the set								
Connecting the pipe to the fitting: Insert the pipe into the fitting until it encounters the stop (check through the 4 "windows" ring); take care not to move the O-ring seals out of their seat. Connection will be easier if the pipe is lubricated with silicone oil or water. For domestic distribution applications, make sure that the silicone oil used is suitable for food application. The use of a different lubricant could damage the fitting's seals. Make sure that the oil used is compatible with the construction materials of the fitting. Pressing: Before pressing the fitting, check that the ring nut/bushing is correctly assembled in the specific does that the pipe is placed correctly in contact with the plastic ring nut to ensure that the i aluminium layer does not encounter the covering material. Position the fitting. Make sure that the cimper of the specific tool (pressing tool). Ensure that the jaws are not particularly worn. Press the fitting. Make sure that the cimper fully closes. Tiemme fittings are designed and tested to be pressed indifferently with 6 different p Tiemme fittings are designed and tested to be pressed indifferently with 6 different p Tiemme fittings are designed and rusing the specific tools, depending on the radius required. The pipe can be bent by hand or using the specific tools, depending on the radius required. The table below provides an indication of the minimum bending radius R(mm) Manual Manual	i ne calibrating/deburring tool should be inserted into the pipe and then turned clockwise.								
Insert the pipe into the fitting until it encounters the stop (check through the 4 "windows" ring); take care not to move the O-ring seals out of their seat. Connection will be easier if the pipe is lubricated with silicone oil or water. For domestic distribution applications, make sure that the silicone oil used is suitable for food application. The use of a different lubricant could damage the fitting's seals. Make sure that the oil used is compatible with the construction materials of the fitting. Pressing: Before pressing the fitting, check that the ring nut/bushing is correctly assembled in the specific does not encounter the covering material. Position the fitting correctly onto the crimper of the specific tool (pressing tool). Ensure that the jays are not particularly worn. Press the fitting. Make sure that the zing nut/bushing section of this technical data sheet. Desition the fitting correctly onto the crimper of the specific tool (pressing tool). Ensure that the jays are not particularly worn. Press the fitting. Make sure that the cimper fully closes. Tiemme customised TH - TH - U - H - B - RF For further details, see the "MULTI-CRIMP FITTINGS" section of this technical data sheet. Bending: Manual Manual We external pipe Ending radius R (mm) Manual Manual									
ring); take care not to move the O-ring seals out of their seat. Connection will be easier if the pipe is lubricated with silicone oil or water. For domestic distribution applications, make sure that the silicone oil used is suitable for food application. The use of a different lubricant could damage the fitting's seals. Make sure that the oil used is compatible with the construction materials of the fitting. Pressing: Before pressing the fitting, check that the ring nut/bushing is correctly assembled in the specific made in the brass fitting, if not, the ring nut/bushing should be repositioned. It is also advis check that the pipe is placed correctly in contact with the plastic ring nut to ensure that the i aluminium layer does not encounter the covering material. Position the fitting correctly onto the crimper of the specific tool (pressing tool). Ensure that the jaws are not particularly worn. Press the fitting. Make sure that the crimper of the specific tool (pressing tool). Ensure that the jaws are not particularly worn. Press the fitting sere designed and tested to be pressed indifferently with 6 different present the designed and tested to be pressed indifferently with 6 different present the details, see the "MULTI-CRIMP FITTINGS" section of this technical data sheet. Bending: The pipe can be bent by hand or using the specific tools, depending on the radius required. The table below provides an indication of the minimum bending radii permited: The pipe can be bent by hand or using the specific tools, depending on the radius required. The table below provides an indication									
Connection will be easier if the pipe is lubricated with silicone oil or water. For domestic distribution applications, make sure that the silicone oil used is suitable for food application. The use of a different lubricant could damage the fitting's seals. Make sure that the oil used is compatible with the construction materials of the fitting. Image: Construction of the pipe is placed correctly in contact with the plastic ring nut to ensure that the i aluminium layer does not encounter the covering material. Position the fitting correctly onto the crimper of the specific tool (pressing tool). Ensure that the jaws are not particularly worn. Press the fitting. Make sure that the comparison of this technical data sheet. Image: Construction of the specific tools, depending on the radius required. The table below provides an indication of the minimum bending radiu permitted: Image: Construction of the specific tools, depending on the radius required. The table below provides an indication of the minimum bending radius required. The table below provides an indication of the minimum bending radius required. The table below provides an indication of the minimum bending radius required.	on the								
distribution applications, make sure that the silicone oil used is suitable for food application. The use of a different lubricant could damage the fitting's seals. Make sure that the oil used is compatible with the construction materials of the fitting. Pressing: Before pressing the fitting, check that the ring nut/bushing is correctly assembled in the specimade in the brass fitting, if not, the ring nut/bushing should be repositioned. It is also advise check that the pipe is placed correctly in contact with the plastic ring nut to ensure that the i aluminum layer does not encounter the covering material. Position the fitting correctly onto the crimper of the specific tool (pressing tool). Ensure that the jaws are not particularly worn. Press the fitting. Make sure that the crimper fully closes. Tiemme fittings are designed and tested to be pressed indifferently with 6 different prime customised TH - TH - U - H - B - RF For further details, see the "MULTI-CRIMP FITTINGS" section of this technical data sheet. Bending: The pipe can be bent by hand or using the specific tools, depending on the radius required. The table below provides an indication of the minimum bending radii permitted: Manual Manual Manual Manual									
distribution applications, make sure that the silicone oil used is suitable for food application. The use of a different lubricant could damage the fitting's seals. Make sure that the oil used is compatible with the construction materials of the fitting. Pressing: Before pressing the fitting, check that the ring nut/bushing is correctly assembled in the specimade in the brass fitting, if not, the ring nut/bushing should be repositioned. It is also advise check that the pipe is placed correctly in contact with the plastic ring nut to ensure that the i aluminum layer does not encounter the covering material. Position the fitting correctly onto the crimper of the specific tool (pressing tool). Ensure that the jaws are not particularly worn. Press the fitting. Make sure that the crimper fully closes. Tiemme fittings are designed and tested to be pressed indifferently with 6 different p Tiemme fittings. Prese can be bent by hand or using the specific tools, depending on the radius required. The table below provides an indication of the minimum bending radii permitted: Metural Manual Manual	: water								
We have that the oil used is compatible with the construction materials of the fitting. Pressing: Before pressing the fitting, check that the ring nut/bushing is correctly assembled in the specific does not encounter the covering material. Position the fitting correctly onto the crimper of the specific tool (pressing tool). Ensure that the jaws are not particularly worn. Press the fitting. Make sure that the crimper fully closes. Them effittings are designed and tested to be pressed indifferently with 6 different prestor there details, see the "MULTI-CRIMP FITTINGS" section of this technical data sheet. Bending: The table below provides an indication of the minimum bending radii permitted: Image: the table below provides an indication of the minimum bending radii permitted:									
Make sure that the oil used is compatible with the construction materials of the fitting. Make sure that the oil used is compatible with the construction materials of the fitting. Make sure that the oil used is compatible with the construction materials of the fitting. Make sure that the oil used is compatible with the construction materials of the fitting. Pressing: Before pressing the fitting, check that the ring nut/bushing is correctly assembled in the specific does not encounter the covering material. Position the fitting correctly onto the crimper of the specific tool (pressing tool). Ensure that the jaws are not particularly worn. Press the fitting. Make sure that the crimper fully closes. Tiemme fittings are designed and tested to be pressed indifferently with 6 different prime customised TH - TH - U - H - B - RF For further details, see the "MULTI-CRIMP FITTINGS" section of this technical data sheet. Bending: The pipe can be bent by hand or using the specific tools, depending on the radius required. The table below provides an indication of the minimum bending radii permitted: Manual Manual									
Pressing: Before pressing the fitting, check that the ring nut/bushing is correctly assembled in the speciding of the properties of the properties of the specific tool (between the specific t									
Before pressing the fitting, check that the ring nut/bushing is correctly assembled in the specific decision of the provide and									
made in the brass fitting, if not, the ring nut/bushing should be repositioned. It is also advise check that the pipe is placed correctly in contact with the plastic ring nut to ensure that the inaluminium layer does not encounter the covering material. Position the fitting correctly onto the crimper of the specific tool (pressing tool). Ensure that the jaws are not particularly worn. Press the fitting. Make sure that the crimper fully closes. Tiemme fittings are designed and tested to be pressed indifferently with 6 different press the fitting. Tiemme customised TH - TH - U - H - B - RF For further details, see the "MULTI-CRIMP FITTINGS" section of this technical data sheet. Bending: The pipe can be bent by hand or using the specific tools, depending on the radius required. The table below provides an indication of the minimum bending radii permitted: Ø external pipe Bending radius R (mm) Manual Manual	Pressing:								
Image: Construction of the specific tools, depending on the radius required. Image: Construction of the specific tools, depending on the radius required. Image: Construction of the specific tools, depending on the radius required. Image: Construction of the specific tools, depending on the radius required. Image: Construction of the specific tools, depending on the radius required. Image: Construction of the specific tools, depending on the radius required. Image: Construction of the specific tools, depending on the radius required. Image: Construction of the specific tools, depending on the radius required. Image: Construction of the specific tools, depending on the radius required. Image: Construction of the specific tools, depending on the radius required. Image: Construction of the specific tools, depending on the radius required. Image: Construction of the specific tools, depending on the radius required. Image: Construction of the specific tools, depending on the radius required. Image: Construction of the minimum bending radii permitted: Image: Construction of the specific tools, depending on the radius required. Image: Construction of the minimum bending radii permitted: Image: Construction of the minimum bending radii permitted: Image: Construction of the minimum bending radii permitted: Image: Construction of the minimage: Constect tools tof the minimum bending radii per	Before pressing the fitting, check that the ring nut/bushing is correctly assembled in the specific seat								
aluminium layer does not encounter the covering material. Position the fitting correctly onto the crimper of the specific tool (pressing tool). Ensure that the jaws are not particularly worn. Press the fitting. Make sure that the crimper fully closes. Tiemme fittings are designed and tested to be pressed indifferently with 6 different press the fitting. See the "MULTI-CRIMP FITTINGS" section of this technical data sheet. Bending: The pipe can be bent by hand or using the specific tools, depending on the radius required. The table below provides an indication of the minimum bending radii permitted: Ø external pipe Bending radius R (mm) Manual Manual	made in the brass fitting, if not, the ring nut/bushing should be repositioned. It is also advisable to								
Position the fitting correctly onto the crimper of the specific tool (pressing tool). Ensure that the jaws are not particularly worn. Press the fitting. Make sure that the crimper fully closes. Tiemme fittings are designed and tested to be pressed indifferently with 6 different p Tiemme customised TH - TH - U - H - B - RF For further details, see the "MULTI-CRIMP FITTINGS" section of this technical data sheet. Bending: The pipe can be bent by hand or using the specific tools, depending on the radius required. The table below provides an indication of the minimum bending radii permitted: Ø external pipe Bending radius R (mm) (mm) Manual Manual	check that the pipe is placed correctly in contact with the plastic ring nut to ensure that the internal								
Ensure that the jaws are not particularly worn. Press the fitting. Make sure that the crimper fully closes. Tiemme fittings are designed and tested to be pressed indifferently with 6 different p Tiemme customised TH - TH - U - H - B - RF For further details, see the "MULTI-CRIMP FITTINGS" section of this technical data sheet. Bending: The pipe can be bent by hand or using the specific tools, depending on the radius required. The table below provides an indication of the minimum bending radii permitted: Ø external pipe Bending radius R (mm) (mm) Manual Manual									
Press the fitting. Make sure that the crimper fully closes. Tiemme fittings are designed and tested to be pressed indifferently with 6 different pressed indifferently with 6 differently with 6 different									
Tiemme fittings are designed and tested to be pressed indifferently with 6 different preserved in the pressed indifferently with 6 different pressed indifferently with 6 different preserved indifferently with 6 different preserved indifferently with 6 different pressed indifferently with 6 different preserved indifferently with 6 different preserved indifferently with 6 different pressed indifferently with 6 differently wit									
Tiemme customised TH - TH - U - H - B - RF For further details, see the "MULTI-CRIMP FITTINGS" section of this technical data sheet. Bending: The pipe can be bent by hand or using the specific tools, depending on the radius required. The pipe can be bent by hand or using the specific tools, depending on the radius required. The table below provides an indication of the minimum bending radii permitted: Ø external pipe Bending radius R (mm) (mm) Manual Manual	rofilos								
For further details, see the "MULTI-CRIMP FITTINGS" section of this technical data sheet. Bending: The pipe can be bent by hand or using the specific tools, depending on the radius required. The table below provides an indication of the minimum bending radii permitted: Ø external pipe Bending radius R (mm) (mm) Manual Manual	TOTILES.								
Bending: The pipe can be bent by hand or using the specific tools, depending on the radius required. The table below provides an indication of the minimum bending radii permitted: Ø external pipe Bending radius R (mm) (mm) Manual Manual									
The table below provides an indication of the minimum bending radii permitted: Ø external pipe Bending radius R (mm) (mm) Manual Manual									
Ø external pipe Bending radius R (mm) (mm) Manual Manual Manual Merchani	The pipe can be bent by hand or using the specific tools, depending on the radius required.								
(mm) Manual Manual Manual Mechani									
(mm) Manual Mechani									
with internal spring with external spring									
14 70 56 56 41	cal								
16 80 64 64 49	cal								
18 90 72 72 65	cal								
20 100 80 80 80	cal								
De 25 130 100 - 90 De 26 130 100 100 90	cal								
$\frac{1}{20}$ $\frac{1}{100}$ $\frac{100}{100}$ $\frac{100}{100}$ $\frac{100}{100}$ $\frac{100}{100}$	cal								
$\left(\right) \left(\begin{array}{c} R \\ R \\ 40 \\ - \\ - \\ 100 \\ - \\ - \\ 150 \\$	cal								
50 190	cal								
63 240	cal								
75 320	cal								
90 530	cal								

IMPORTANT: Carrying out the following operations incorrectly, may compromise the tightness of the joint.

TIEMME RACCORDERIE S.p.A. will accept no responsibility for breakages and/or accidents resulting from failure to comply with these indications and from improper use of the system. The information shown does not exempt the user from scrupulously following current regulations and good technical standards.

3

nutti roup



NEVER:

- Use incompatible or harmful substances.
- Allow direct contact of the fittings with cast concrete during installation: protect with suitable means.
- Connect the multilayer pipe directly to boilers, water heaters or any other source of heat

We recommended using a joint with a metal pipe for a length of at least one metre to protect the multilayer pipe from any malfunction of heat generators


ΕN

SOME POSSIBLE CAUSES OF LEAKS:


- Pressing performed with excessively worn crimpers.
- Failure to fully close the crimper.
- Incorrect positioning of the fitting on the crimper at the time of pressing.
- Breakage or leakage of the O-rings due to pipes not being properly cut, calibrated and deburred.
- Connection with incompatible products.
- Incompatible fluids.
- Excessive use of sealants (e.g. hemp, PTFE tape etc...) on male/female threads could generate tension in the fittings.
- Freezing of the system or excessive internal pressure
- Storage of materials in unsuitable environments.
- Unpredictable external causes, such as accidental impacts or inappropriate movements.

MULTI-CRIMP FITTINGS


Tiemme fittings are designed and tested to be pressed indifferently with 6 different profiles: Tiemme customised TH - TH - U - H - B - RF.

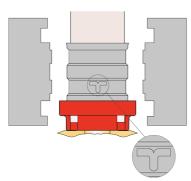


Logo illustration imprinted on the bush after pressing performed using a **TH** profile crimping tool – **Tiemme customised**

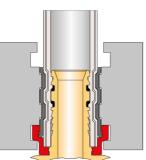


Crimping profile: Tiemme customised TH Crimping profile: TH

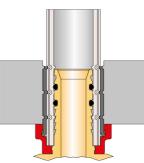


Crimping profile: U

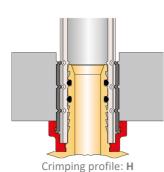

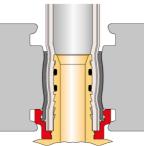

Crimping profile: B

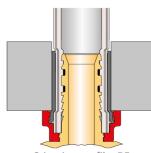

Crimping profile: RF

Below is a table showing the compatibility of the different crimping profiles depending on the diameter of the pipe:

						Ø external	pipe (mm)					
Crimping profile	14	16	18	20	25	26	32	40	50	63	75	90
TH	Х	Х	Х	Х	Х	Х	Х	Х	Х	Х	Х	-
U	Х	Х	Х	Х	Х	-	Х	-	-	-	-	Х
Н	Х	Х	Х	Х	Х	Х	Х	-	-	-	-	-
В	Х	Х	Х	Х	-	Х	Х	-	-	-	-	-
RF	Х	Х	Х	Х	-	-	-	-	-	-	-	-

(X) Compatible



⁽⁻⁾ Non-compatible



LOCALISED PRESSURE DROPS

The values of the pressure drops of the fittings, expressed in equivalent metres of pipe (Leq), are shown below, i.e. the localised pressure drops of the fittings are expressed in an assumed length of the network (AL-COBRAPEX pipe) which determines the actual resistance value.

AL-COBRAPEX pipe	FLUID SPEED (m/s)		→	+	↓ ↓		↑ 	Image: A state of the state
	_				quivalent metres	1 1		
	0.5	0.29	1.23	1.23	0.44	1.28	0.29	1.23
Ø 14	0.8	0.32	1.33	1.33	0.48	1.39	0.32	1.33
-	1	0.33	1.39	1.39	0.50	1.44	0.33	1.39
	2	0.41	1.72	1.72	0.62	1.79	0.41	1.72
	0.5	0.31	1.16	1.25	0.38	1.31	0.31	1.16
Ø 16	0.8	0.35 0.33	1.29 1.23	1.39	0.42	1.46	0.31	1.23 1.23
	1	0.33	1.23	1.33 1.70	0.40 0.51	1.40 1.79	0.33 0.43	1.23
	0.5	0.43	1.57	1.70	0.34	1.33	0.43	1.21
	0.8	0.34	1.37	1.41	0.34	1.49	0.25	1.37
Ø 18	1	0.33	1.33	1.38	0.38	1.45	0.25	1.33
	2	0.41	1.64	1.69	0.46	1.80	0.31	1.64
	0.5	0.31	1.32	1.32	0.40	1.40	0.31	1.32
	0.8	0.36	1.52	1.52	0.46	1.63	0.36	1.52
Ø 20	1	0.37	1.58	1.58	0.47	1.68	0.37	1.58
	2	0.44	1.88	1.88	0.56	2.00	0.44	1.88
	0.5	0.29	1.40	1.45	0.41	1.63	0.29	-
Ø 25	0.8	0.33	1.60	1.67	0.47	1.87	0.33	-
	1	0.35	1.69	1.76	0.49	1.97	0.35	-
	2	0.40	1.92	2.00	0.56	2.24	0.40	-
Ø 26	0.5	0.29	1.40	1.45	0.41	1.63	0.29	-
	0.8	0.33	1.60	1.67	0.47	1.87	0.33	-
	1	0.35	1.69	1.76	0.49	1.97	0.35	-
	2	0.40	1.92	2.00	0.56	2.24	0.40	-
	0.5	0.23	1.56	1.56	0.39	1.56	0.31	-
Ø 32	0.8	0.27	1.83	1.83	0.46	1.83	0.37	-
Ø 52	1	0.29	1.96	1.96	0.49	1.96	0.39	-
	2	0.33	2.22	2.22	0.56	2.22	0.44	-
	0.5	0.27	1.63	2.07	0.44	2.17	0.33	-
Ø 40	0.8	0.31	1.85	2.34	0.49	2.46	0.37	-
<i>p</i>	1	0.33	1.97	2.50	0.53	2.63	0.40	-
	2	0.39	2.31	2.92	0.62	3.08	0.46	-
	0.5	0.23	2.13	2.29	0.46	2.44	0.31	-
Ø 50	0.8	0.26	2.42	2.60	0.52	2.77	0.35	-
	1	0.27	2.50	2.68	0.54	2.86	0.36	-
	2	0.31	2.87	3.08	0.62	3.28	0.41	-
	0.5	0.21	2.50	2.92	0.63	3.13	0.42	-
Ø 63	0.8	0.21	2.56	2.99	0.64	3.20	0.43	-
	1 2	0.24 0.28	2.86 3.38	3.33 3.94	0.71 0.85	3.57 4.23	0.48 0.56	-
<u> </u>	0.5	0.13	2.93	3.19	0.85	3.46	0.30	-
	0.8	0.14	3.06	3.34	0.70	3.62	0.30	-
Ø 75	1	0.15	3.33	3.64	0.76	3.94	0.30	
	2	0.17	3.83	4.17	0.87	4.52	0.35	
	0.5	0.00	3.21	3.53	0.64	3.85	0.30	_
_	0.8	0.00	3.56	3.91	0.71	4.27	0.40	-
Ø 90	1	0.00	3.57	3.93	0.71	4.29	0.36	-
	2	0.10	4.21	4.63	0.84	5.05	0.42	-

Speed 0.5 - 0.8 m/s: Heating application field

Speed 1 - 2 m/s: Domestic hot water application field



5



ΕN

Alternatively, in the case of more complex sizing processes, the pressure drop values can be calculated using the following formula:

$$\Delta p = k * 0,005 * \rho * v^2$$

where:


Δ**p** = Localized pressure drop (mbar) **k** = Loss factor **ρ** = Fluid density (kg/m³)

 \mathbf{v} = Fluid speed (m/s)

The value of loss factor **k** is shown below

AL-COBRAPEX pipe		↑	+	↓		↑ ■ ↑	¢ ↑
				Loss factor k			
Ø 14	1.2	5.0	5.0	1.8	5.2	1.2	5.0
Ø 16	1.0	3.7	4.0	1.2	4.2	1.0	3.7
Ø 18	0.8	3.2	3.3	0.9	3.5	0.6	3.2
Ø 20	0.7	3.0	3.0	0.9	3.2	0.7	3.0
Ø 25	0.5	2.4	2.5	0.7	2.8	0.5	-
Ø 26	0.5	2.4	2.5	0.7	2.8	0.5	-
Ø 32	0.3	2.0	2.0	0.5	2.0	0.4	-
Ø 40	0.25	1.5	1.9	0.4	2.0	0.3	-
Ø 50	0.15	1.4	1.5	0.3	1.6	0.2	-
Ø 63	0.1	1.2	1.4	0.3	1.5	0.2	-
Ø 75	0.05	1.1	1.2	0.25	1.3	0.1	-
Ø 90	0.0	1.0	1.1	0.2	1.2	0.1	-

MAIN ACCESSORIES OF THE SYSTEM

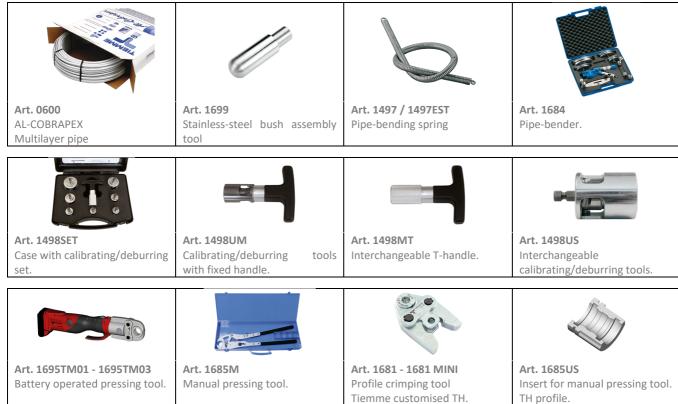

See the product catalogue for order codes / further details.



INFORMATION FROM TIEMME

GALVANIC CORROSION OR "BATTERY EFFECT":

The phenomenon of galvanic corrosion occurs when two materials, with a different noble value, are placed in direct contact.

FN

A flow of electrons is generated from the less noble material, which oxidises, towards the more noble material which has greater potential. Less noble materials tend to corrode compared to the more noble materials, so putting a less noble metal into direct contact with a more noble metal will lead to the less noble metal corroding (acting as an anode) and corrosion will be accelerated.

The use of Tiemme press fittings guarantees that this phenomenon will not occur.

In fact, the internal aluminium layer of the pipe does not encounter the fitting (made of brass), as it is separated from the dielectric cap of the actual fitting.

ITEM SPECIFICATIONS

1650CT Series

Compact press fitting for "AL-COBRAPEX" multilayer pipe, made up of: CW617N brass body, PA ring nut / dielectric and viewer ring, EPDM Oring seal, clamping bush in AISI 304 stainless steel, ISO 228 / ISO 7/1 (EN 10226) threads.

Maximum working temperature: + 95 °C. Minimum working temperature: - 20 °C (provided the fluid remains in the liquid phase). Maximum working pressure: 10 bar (relative to the AL-COBRAPEX multilayer pipe).

Fluid compatibility: drinking water, water and glycol solutions (maximum percentage of glycol 30%), non-corrosive fluids.

Production range: from \emptyset 16 to \emptyset 32 mm, different configurations (straight, curved, T-shaped etc.) and with different types of connections (female threaded connections, male threaded connections, intermediate press connections).

1650 Series

Press fitting for "AL-COBRAPEX" multilayer pipe, made up of: CW617N brass body, PA ring nut / dielectric and viewer ring, EPDM O-ring seal, clamping bush in AISI 304 stainless steel, ISO 7/1 (EN 10226) threads.

Maximum working temperature: + 95 °C. Minimum working temperature: - 20 °C (provided the fluid remains in the liquid phase). Maximum working pressure: 10 bar (relative to the AL-COBRAPEX multilayer pipe).

Fluid compatibility: drinking water, water and glycol solutions (maximum percentage of glycol 30%), non-corrosive fluids.

Production range: from \emptyset 14 to \emptyset 90 mm, different configurations (straight, curved, T-shaped etc.) and with different types of connections (female threaded connections, male threaded connections, intermediate press connections).

1650CTSN Series

Compact press fitting for "AL-COBRAPEX" multilayer pipe, made up of: CW617N tin-plated brass body, PA ring nut / dielectric and viewer ring, EPDM O-ring seal, clamping bush in AISI 304 stainless steel, ISO 228 / ISO 7/1 (EN 10226) threads.

Maximum working temperature: + 95 °C. Minimum working temperature: - 20 °C (provided the fluid remains in the liquid phase). Maximum working pressure: 10 bar (relative to the AL-COBRAPEX multilayer pipe).

Fluid compatibility: drinking water, water and glycol solutions (maximum percentage of glycol 30%), non-corrosive fluids.

Production range: from \emptyset 16 to \emptyset 32 mm, different configurations (straight, curved, T-shaped etc.) and with different types of connections (female threaded connections, male threaded connections, intermediate press connections).

1650SN series

Press fitting for "AL-COBRAPEX" multilayer pipe, made up of: tin-plated CW617N brass body, PA ring nut / dielectric and viewer ring, EPDM Oring seal, clamping bush in AISI 304 stainless steel, ISO 7/1 (EN 10226) threads.

Maximum working temperature: + 95 °C. Minimum working temperature: - 20 °C (provided the fluid remains in the liquid phase). Maximum working pressure: 10 bar (relative to the AL-COBRAPEX multilayer pipe).

Fluid compatibility: drinking water, water and glycol solutions (maximum percentage of glycol 30%), non-corrosive fluids.

Production range: from \emptyset 14 to \emptyset 63 mm, different configurations (straight, curved, T-shaped etc.) and with different types of connections (female threaded connections, male threaded connections, intermediate press connections).

1650DR series

Press fitting for "AL-COBRAPEX" multilayer pipe, made up of: body in anti-dezincification CW602N brass, PA ring nut / dielectric and viewer ring, EPDM O-ring seal, clamping bush in AISI 304 stainless steel, ISO 7/1 (EN 10226) threads.

Maximum working temperature: + 95 °C. Minimum working temperature: - 20 °C (provided the fluid remains in the liquid phase). Maximum working pressure: 10 bar (relative to the AL-COBRAPEX multilayer pipe).

Fluid compatibility: drinking water, water and glycol solutions (maximum percentage of glycol 30%), non-corrosive fluids.

Production range: from \emptyset 14 to \emptyset 63 mm, different configurations (straight, curved, T-shaped etc.) and with different types of connections (female threaded connections, male threaded connections, intermediate press connections).



ΕN

CERTIFICATIONS







WaterMark

*

ΕŤΑ

Gnutti Group